


# Easy to install! Eight simple steps!

You will find 'The Boot' will make a substantial difference to the amount of sawdust in your shop!

Please Note: The Boot can only be installed on a saw that has a belt guard.



1) Clean all dust away from both sides of the saw body close to the opening in the back of the saw. Clean all dust away from the bottom of the opening of the saw stand and saw body.

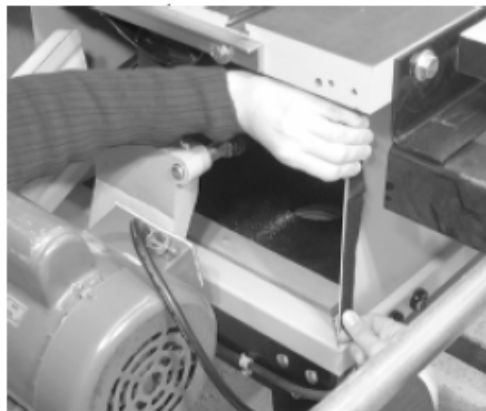

2) Measure the length of each side of the saw body and the bottom of the opening. Cut hook & loop strips to these measurements.



3) Attach the hook & loop strips to the sides and bottom of the saw body by peeling the protective back off the velcro strip. Rub firmly so it fastens well to the saw body.



4) With the top side up (side with the stiffener), slip 'The Boot' over the motor and belt guard.



5) There is a hook & loop strip attached inside 'The Boot'. Attach 'The Boot' hook & loop strip to the strips you just applied to your saw body.



6) There is excess material on 'The Boot' to accommodate wrapping wires. Put any excess material to the center of the bottom.



7) Fasten the small hook & loop strip (found inside 'The Boot') to the motor or belt guard (whatever works best on your saw). This will stop 'The Boot' from being sucked into the back of the saw when the dust collector is on.



8) Before starting your saw, crank your blade over to 45 degrees to make sure there is enough material to accommodate this action. You may need to adjust where you have placed the excess material.

## Workshop Supply Inc.

Your next project  
just got easier!

[www.WorkshopSupply.com](http://www.WorkshopSupply.com)

1-800-387-5716