



### Barrel Hinge Installation Guidelines ( #3148 & #3149)



The wood thickness determines where the hole should be drilled:

- 3/8" thick wood = 3/8" from edge to hole centre
- 1/2" thick wood = 1/2" from edge to hole centre

Drill hole 5 mm in diameter and approximately 7.5 mm deep.  
See Illustration 1.

Cut at 45° across half of hole. See Illustration 2.

Put a drop of glue into each hole and insert the barrel hinge.  
Make sure the axis of rotation is aligned to the direction of motion.

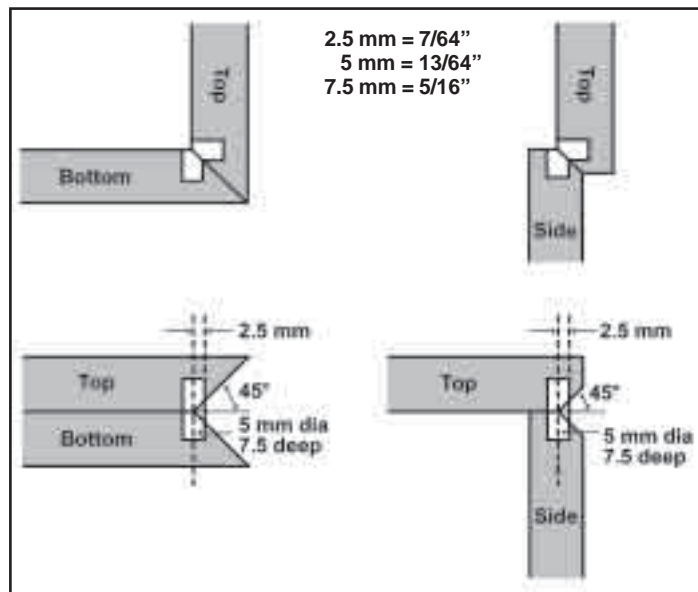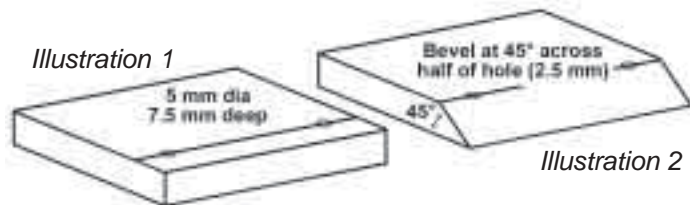

[www.WorkshopSupply.com](http://www.WorkshopSupply.com)

1-800-387-5176

COPYRIGHT © 2005 Workshop Supply Inc.  
100 Commissioner St Embro ON N0J 1J0