


# Installation Guidelines for European Hinges

## NOTE: 110 Degree Inset Euro Hinge

Increase the 37mm dimension by the amount the door is inset based on a 5/8" thick door.



This would mean that if you want your door to end up flush with the front of the cabinet, you need add 16mm (5/8") to the 37mm dimension.

If you want the door to set in farther, add that amount to this new number.

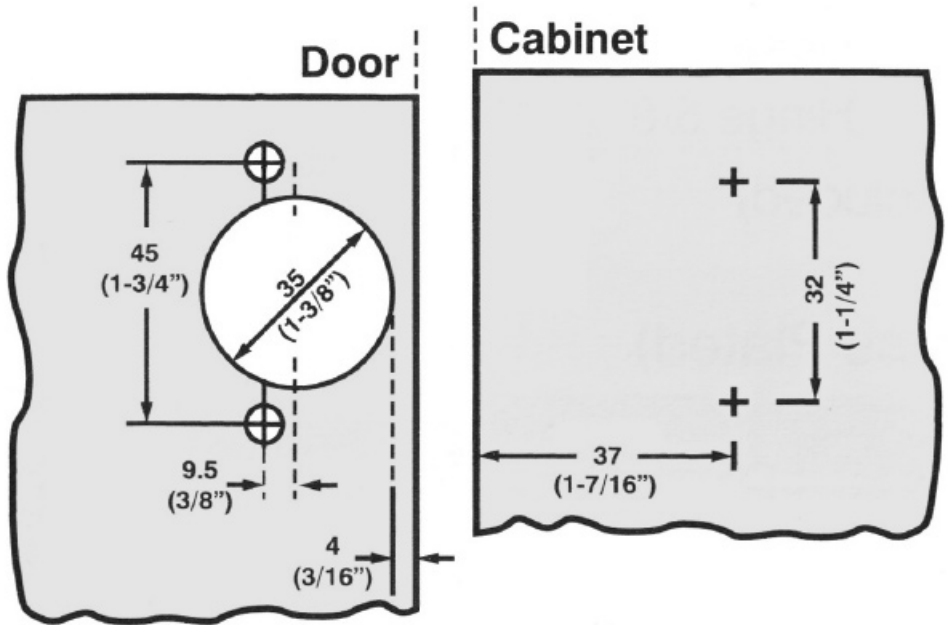

Visit [www.workshopsupply.com](http://www.workshopsupply.com)  
(search keyword euro)  
and find quality european hinges that  
exceed industry standards.

- Face Frame • Frameless •
- Compact • Full Overlay •
- Half Overlay • 45° Corner •
- Blind Corner •
- Soft Close • Cam Adj •
- and many more!

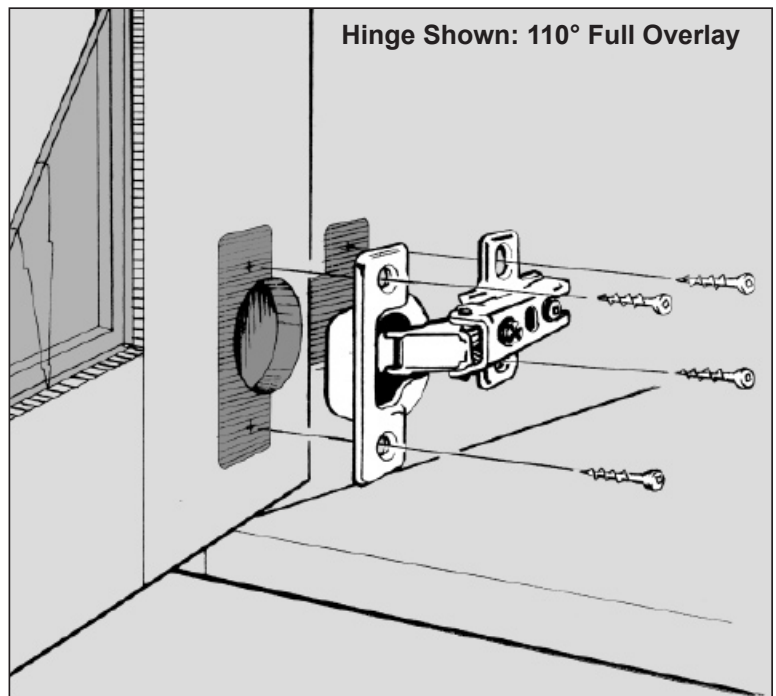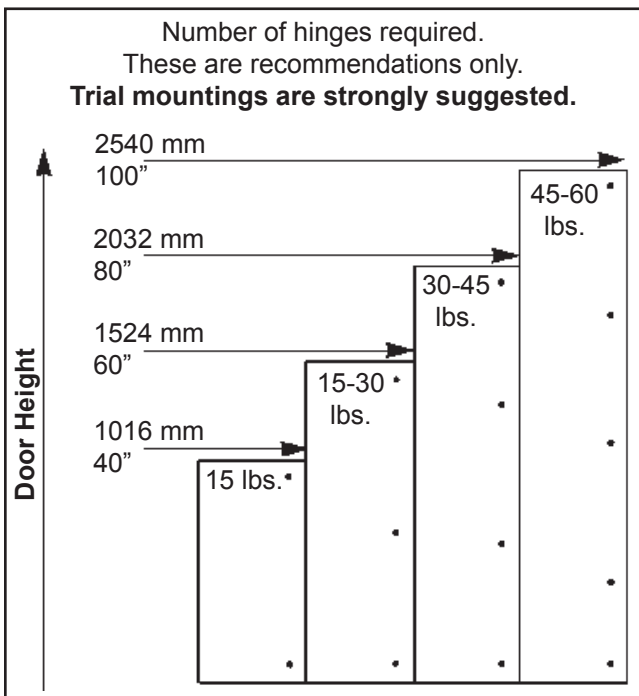

2014 © Workshop Supply Inc

**Workshop Supply**  
Embroid ON Canada N0J 1J0  
1-800-387-5716

**Your Next Project Just Got Easier**  
Shop on-line! Sign up for your **free eNewsletter!**  
[www.workshopsupply.com](http://www.workshopsupply.com)

Home of  
**BlackLack**  
Woodworking Tools