


4242-0500B Bed Rail Hanger Set

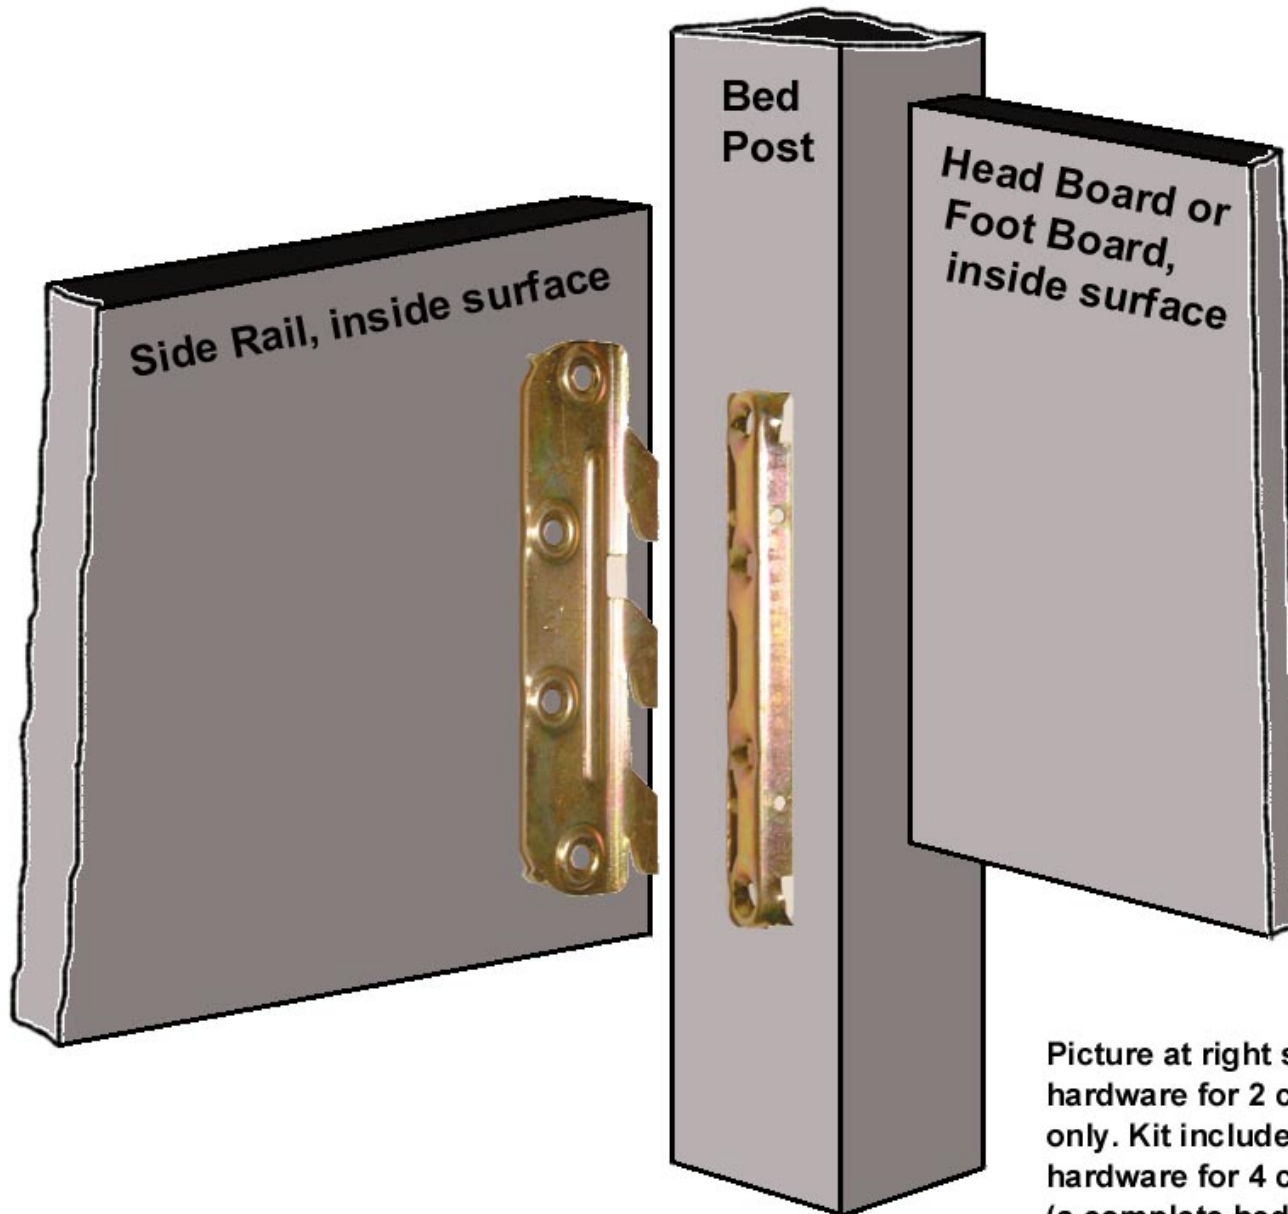

Hanger set fastens to inside surface of rail and bed post with customer supplied #8 fasteners. Use the longest possible screw into the side rail without penetrating the outside surface. Use longer fasteners into the bed post. No mortising required!

1. Place side rail against bed post as if assembled.
2. Note set includes LH and RH pairs of hanger assemblies.
3. Place assembled hanger set against inside mating surfaces and fasten side rail component first. Firmly engage the "teeth into the side rail by hammer tap.
4. Fasten bed post component to bed post drawing teeth into the post with the fasteners. This pre-loads the connection so there's no movement between side rail and bed post.
5. Disassembly of bed side rail will require light hammer tap from below to disengage the hardware.

Picture at right shows hardware for 2 corners only. Kit includes hardware for 4 corners (a complete bed kit).

